




SPARE PARTS MANUAL

FLX EXTENSION SHAFT

FES-2

181217

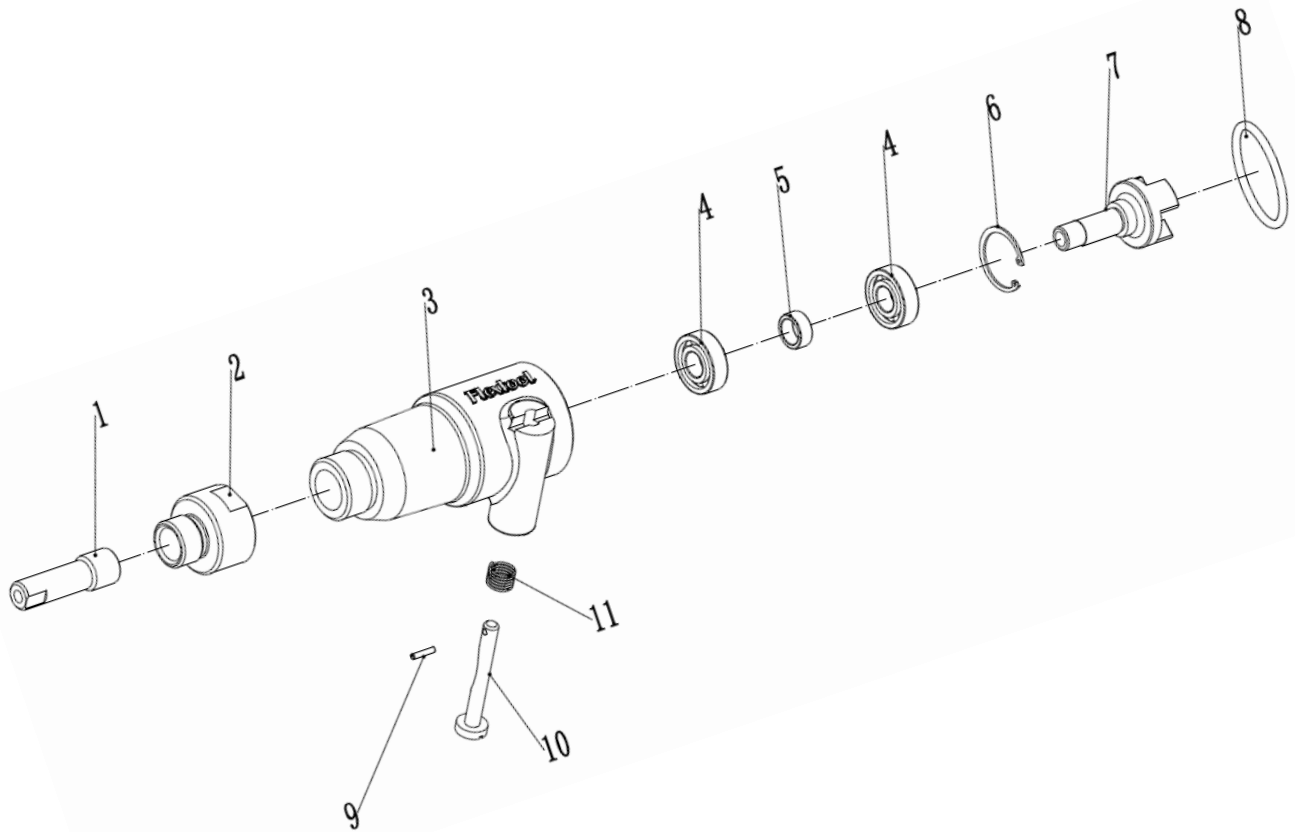

Applies to product from Serial Number D07-10000

1300 353 986


www.flextool.com.au



Flextool[®]

SINCE 1951

Parchem Construction Supplies Pty Ltd
7 Lucca Road, Wyong NSW AUS 2259

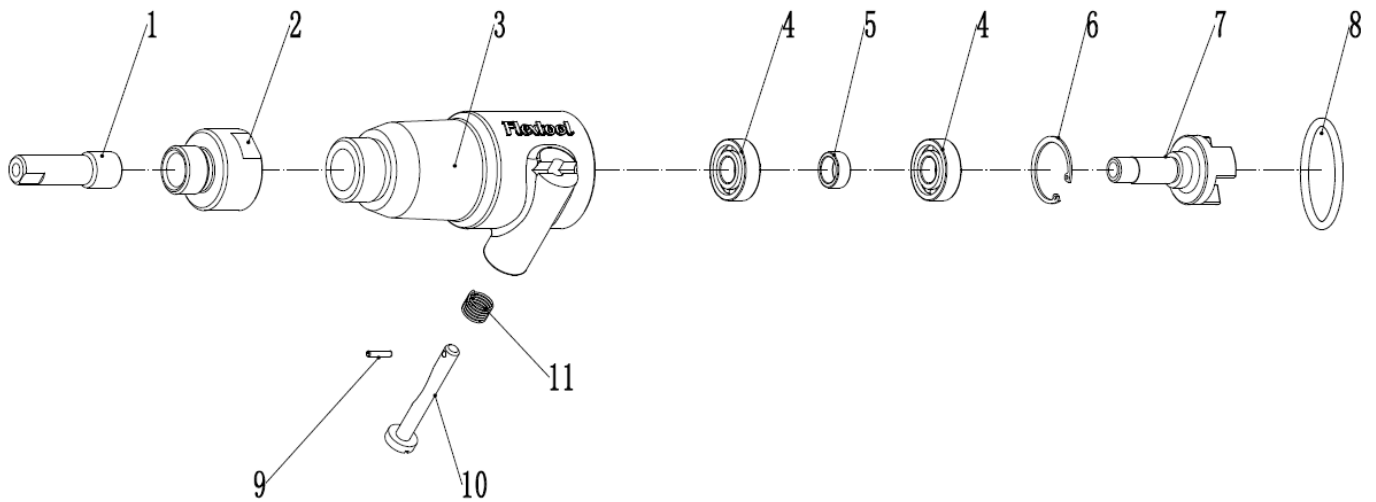


Extension Coupling

Item No.	Product Code	Description	Qty	Remarks
1	See Remarks	FLX EXT SHAFT SPINDLE ADAPTOR (206110)	1	Use SK-1 or AS-1
2	See Remarks	FLX ADAPTOR HOUSING (206109)	1	Use AS-1
3	See Remarks	FLX EXT COUPLING HOUSING (206901)	1	Use AS-1
4	See Remarks	FLX BEARING (550102)	2	Use SK-1 or AS-1
5	See Remarks	FLX SPACER (046330)	1	Use SK-1 or AS-1
6	See Remarks	FLX CIRCLIP (670105)	1	Use SK-1 or AS-1
7	See Remarks	FLX SPINDLE 3-TEETH (360422)	1	Use AS-1
8	See Remarks	FLX O-RING (510315)	1	Use SK-1 or AS-1
9	See Remarks	FLX ROLL PIN (673016)	1	Use SK-2 or AS-1
10	See Remarks	FLX EXT COUPLING TRIGGER (206902)	1	Use SK-2 or AS-1
11	See Remarks	FLX SPRING TORSION (206903)	1	Use SK-2 or AS-1

Extension Coupling (Assembly / Service Kits)

Item No.	Product Code	Description	Qty	Remarks
AS-1	NPS06342-UNIT	FLX COUPLING ASSY EXT SHAFT (206900)	1	Inc Items: 1 - 11

SK-1	NPS03046-UNIT	FLX SERVICE KIT EXTENSION COUPLING (206900SKA)	1	Inc Items: 1, 4-6, 8
SK-2	NPS346SK-UNIT	FLX SERVICE KIT TRIGGER EXT COUPLING (206900SKB)	1	Inc Items: 9-11

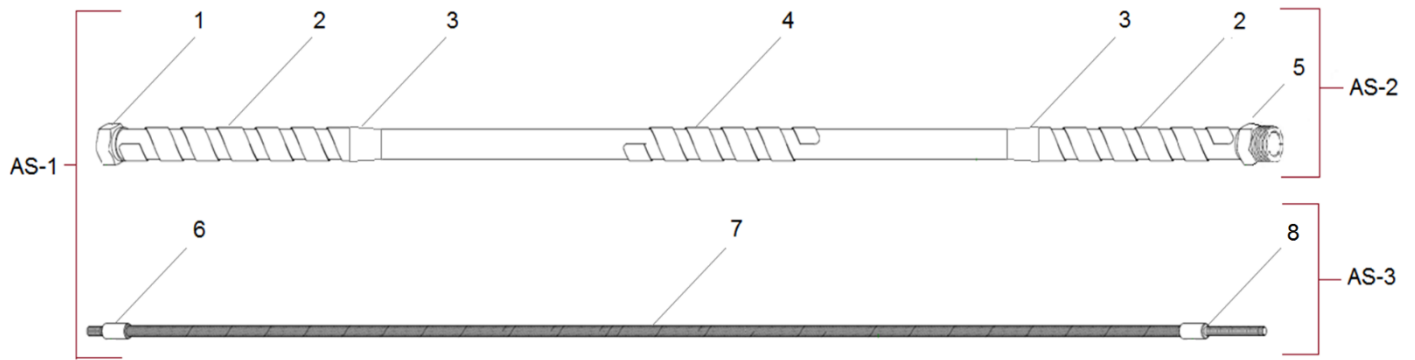


Flexshaft

Item No.	Product Code	Description	Qty	Remarks
1	See Remarks	FLX FERRULE PUMP END 32MM (206103)	1	Use AS-1 or AS-2
2	See Remarks	FLX END SUPPORT SPRING 32MM (206102)	2	Use AS-1 or AS-2
3	See Remarks	FLX COLLAR 32MM (340303)	2	Use AS-1 or AS-2
4	See Remarks	FLX MIDDLE SUPPORT SPRING 32MM (206111)	1	Use AS-1 or AS-2
5	See Remarks	FLX FERRULE COUPLING END 32MM (310315)	1	Use AS-1 or AS-2
6	See Remarks	FLX CORE END SCREW 13MM (206101)	1	Use AS-1 or AS-3
7	See Remarks	FLX INNER CORE 6M X 13MM (810124)	1	Use AS-1 or AS-3
8	See Remarks	FLX CORE END HEX 13MM (049210)	1	Use AS-1 or AS-3

Flexshaft (Assembly / Service Kits)

Item No.	Product Code	Description	Qty	Remarks
AS-1	NPS01590-UNIT	FLX FLEXSHAFT ASSY 6M x 32MM (206946GZ)	1	Inc Items: AS-2 & AS-3
AS-2	NPS01586-UNIT	FLX CASING ASSY 6M x 32MM (206946G)	1	Inc Items: 1 - 5
AS-3	NPS01595-UNIT	FLX INNER CORE ASSY 6M x 13MM (206946Z)	1	Inc Items: 6 - 8

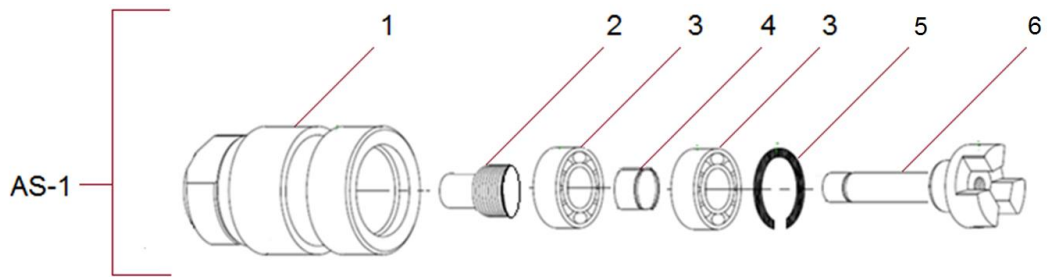

Coupling

Item No.	Product Code	Description	Qty	Remarks
1	See Remarks	FLX BEARING HOUSING (360421)	1	Use AS-1
2	See Remarks	FLX HEX ADAPTOR (046310)	1	Use SK-1
3	See Remarks	FLX BEARING (550102)	2	Use SK-1
4	See Remarks	FLX SPACER (046330)	1	Use SK-1
5	See Remarks	FLX CIRCLIP (670105)	1	Use SK-1
6	See Remarks	FLX SPINDLE 3-TEETH (360422)	1	Use AS-1

Coupling (Assembly / Service Kits)

Item No.	Product Code	Description	Qty	Remarks
AS-1	NPS01575-UNIT	FLX COUPLING ASSY (360420)	1	Inc Items: 1 - 6

SK-1	NPS01576-UNIT	FLX SERVICE KIT COUPLING ASSY(360420SK)	1	Inc Items: 2 - 5
------	---------------	---	---	------------------